

Tabuľka kódov pre nastavenie výstupného kanála

SM-6V (VHF)		SM-6U (UHF)		NASTAVENIE PREPÍNAČA - KÓD		
KANÁL	F _{OB} R [MHz]	KANÁL	F _{OB} R [MHz]	BCD	DESIATKY ⁽³⁾ T 2 3 4	JEDNOTKY 1 2 3 4
R1	49,75	S1	303,25	01	T 0 0 0	0 0 0 1
R2	59,25	S22	311,25	02	T 0 0 0	0 0 1 0
R3	77,25	S23	319,25	03	T 0 0 0	0 0 1 1
R4	85,25	S24	327,25	04	T 0 0 0	0 1 0 0
R5	93,25	S25	335,25	05	T 0 0 0	0 1 0 1
R6 ⁽¹⁾	175,25	S26	343,25	06	T 0 0 0	0 1 1 0
R7 ⁽¹⁾	183,25	S27	351,25	07	T 0 0 0	0 1 1 1
R8 ⁽¹⁾	191,25	S28	359,25	08	T 0 0 0	1 0 0 0
R9 ⁽¹⁾	199,25	S29	367,25	09	T 0 0 0	1 0 0 1
R10 ⁽¹⁾	207,25	S30	375,25	10	T 0 0 1	0 0 0 0
R11 ⁽¹⁾	215,25	S31	383,25	11	T 0 0 1	0 0 0 1
R12 ⁽¹⁾	223,25	S32	391,25	12	T 0 0 1	0 0 1 0
SR1	111,25	S33	399,25	13	T 0 0 1	0 0 1 1
SR2	119,25	S34	407,25	14	T 0 0 1	0 1 0 0
SR3	127,25	S35	415,25	15	T 0 0 1	0 1 0 1
SR4	135,25	S36	423,25	16	T 0 0 1	0 1 1 0
SR5	143,25	S37	431,25	17	T 0 0 1	0 1 1 1
SR6 ⁽¹⁾	151,25	S38	439,25	18	T 0 0 1	1 0 0 0
SR7 ⁽¹⁾	159,25	S39	447,25	19	T 0 0 1	1 0 0 1
SR8 ⁽¹⁾	167,25	S40	455,25	20	T 0 1 0	0 0 0 0
SR11 ⁽¹⁾	231,25	R21 ⁽²⁾	471,25	21	T 0 1 0	0 0 0 1
SR12 ⁽¹⁾	239,25	R22 ⁽²⁾	479,25	22	T 0 1 0	0 0 1 0
SR13 ⁽¹⁾	247,25	R23 ⁽²⁾	487,25	23	T 0 1 0	0 0 1 1
SR14 ⁽¹⁾	255,25	R24 ⁽²⁾	495,25	24	T 0 1 0	0 1 0 0
SR15 ⁽¹⁾	263,25	R25 ⁽²⁾	503,25	25	T 0 1 0	0 1 0 1
SR16 ⁽¹⁾	271,25	R26 ⁽²⁾	511,25	26	T 0 1 0	0 1 1 0
SR17 ⁽¹⁾	279,25	R27 ⁽²⁾	519,25	27	T 0 1 0	0 1 1 1
SR18 ⁽¹⁾	287,25	R28 ⁽²⁾	527,25	28	T 0 1 0	1 0 0 0
SR19 ⁽¹⁾	295,25	R29 ⁽²⁾	535,25	29	T 0 1 0	1 0 0 1
-	-	R30 ⁽²⁾	543,25	30	T 0 1 1	0 0 0 0
-	-	R31 ⁽²⁾	551,25	31	T 0 1 1	0 0 0 1
-	-	R32 ⁽²⁾	559,25	32	T 0 1 1	0 0 1 0
-	-	R33 ⁽²⁾	567,25	33	T 0 1 1	0 0 1 1
-	-	R34 ⁽²⁾	575,25	34	T 0 1 1	0 1 0 0
-	-	R35 ⁽²⁾	583,25	35	T 0 1 1	0 1 0 1
-	-	R36 ⁽²⁾	591,25	36	T 0 1 1	0 1 1 0
-	-	R37 ⁽²⁾	599,25	37	T 0 1 1	0 1 1 1
-	-	R38 ⁽²⁾	607,25	38	T 0 1 1	1 0 0 0
-	-	R39 ⁽²⁾	615,25	39	T 0 1 1	1 0 0 1
-	-	R40 ⁽²⁾	623,25	40	T 1 0 0	0 0 0 0
-	-	R41 ⁽²⁾	631,25	41	T 1 0 0	0 0 0 1
-	-	R42 ⁽²⁾	639,25	42	T 1 0 0	0 0 1 0
-	-	R43 ⁽²⁾	647,25	43	T 1 0 0	0 0 1 1
-	-	R44 ⁽²⁾	655,25	44	T 1 0 0	0 1 0 0
-	-	R45 ⁽²⁾	663,25	45	T 1 0 0	0 1 0 1
-	-	R46 ⁽²⁾	671,25	46	T 1 0 0	0 1 1 0
-	-	R47 ⁽²⁾	679,25	47	T 1 0 0	0 1 1 1
-	-	R48 ⁽²⁾	687,25	48	T 1 0 0	1 0 0 0

pokračovanie ...

Tabuľka kódov pre nastavenie výstupného kanála

... pokračovanie

SM-6V (VHF)		SM-6U (UHF)		NASTAVENIE PREPÍNAČA - KÓD		
KANÁL	F _{OBR} [MHz]	KANÁL	F _{OBR} [MHz]	BCD	DESIATKY ⁽³⁾ T 2 3 4	JEDNOTKY 1 2 3 4
-	-	R49 ⁽²⁾	695,25	49	T 1 0 0	1 0 0 1
-	-	R50 ⁽²⁾	703,25	50	T 1 0 1	0 0 0 0
E2	48,25	R51 ⁽²⁾	711,25	51	T 1 0 1	0 0 0 1
E3	55,25	R52 ⁽²⁾	719,25	52	T 1 0 1	0 0 1 0
E4	62,25	R53 ⁽²⁾	727,25	53	T 1 0 1	0 0 1 1
S2	112,25	R54 ⁽²⁾	735,25	54	T 1 0 1	0 1 0 0
S3	119,25	R55 ⁽²⁾	743,25	55	T 1 0 1	0 1 0 1
S4	126,25	R56 ⁽²⁾	751,25	56	T 1 0 1	0 1 1 0
S5	133,25	R57 ⁽²⁾	759,25	57	T 1 0 1	0 1 1 1
S6	140,25	R58 ⁽²⁾	767,25	58	T 1 0 1	1 0 0 0
S7	147,25	R59 ⁽²⁾	775,25	59	T 1 0 1	1 0 0 1
S8 ⁽¹⁾	154,25	R60 ⁽²⁾	783,25	60	T 1 1 0	0 0 0 0
S9 ⁽¹⁾	161,25	R61 ⁽²⁾	791,25	61	T 1 1 0	0 0 0 1
S10 ⁽¹⁾	168,25	R62 ⁽²⁾	799,25	62	T 1 1 0	0 0 1 0
E5 ⁽¹⁾	175,25	R63 ⁽²⁾	807,25	63	T 1 1 0	0 0 1 1
E6 ⁽¹⁾	182,25	R64 ⁽²⁾	815,25	64	T 1 1 0	0 1 0 0
E7 ⁽¹⁾	189,25	R65 ⁽²⁾	823,25	65	T 1 1 0	0 1 0 1
E8 ⁽¹⁾	196,25	R66 ⁽²⁾	831,25	66	T 1 1 0	0 1 1 0
E9 ⁽¹⁾	203,25	R67 ⁽²⁾	839,25	67	T 1 1 0	0 1 1 1
E10 ⁽¹⁾	210,25	R68 ⁽²⁾	847,25	68	T 1 1 0	1 0 0 0
E11 ⁽¹⁾	217,25	R69 ⁽²⁾	855,25	69	T 1 1 0	1 0 0 1
E12 ⁽¹⁾	224,25	-	-	70	T 1 1 1	0 0 0 0
S12 ⁽¹⁾	238,25	-	-	71	T 1 1 1	0 0 0 1
S13 ⁽¹⁾	245,25	-	-	72	T 1 1 1	0 0 1 0
S14 ⁽¹⁾	252,25	-	-	73	T 1 1 1	0 0 1 1
S15 ⁽¹⁾	259,25	-	-	74	T 1 1 1	0 1 0 0
S16 ⁽¹⁾	266,25	-	-	75	T 1 1 1	0 1 0 1
S17 ⁽¹⁾	273,25	-	-	76	T 1 1 1	0 1 1 0
S18 ⁽¹⁾	280,25	-	-	77	T 1 1 1	0 1 1 1
S19 ⁽¹⁾	287,25	-	-	78	T 1 1 1	1 0 0 0
S20 ⁽¹⁾	294,25	-	-	79	T 1 1 1	1 0 0 1

Poznámka 1: Štandardné prevedenie kanálov pre SM-6V.

2: Štandardné prevedenie kanálov pre SM-6U.

Ostatné prevedenia kanálov sú možné len na požiadanie.

3: **T bit** ... vypína/zapína testovací generátor.

T=0 .. TEST generátor vypnutý, T=1 .. TEST generátor zapnutý.