

Tabuľka prevodov

VÝSTUP VSTUP	R1 (48,5-56,5)	R2 (58-66)	R3 (76-84)	R4 (84-92)	R5 (92-100)	SR1 (110-118)	SR2 (118-126)	SR3 (126-134)	SR4 (134-142)	SR5 (142-150)	SR6 (150-158)	SR7 (158-166)	SR8 (166-174)	R6 (174-182)
R6 (174-182)	125,5													
R7 (182-190)	133,5													
R8 (190-198)	141,5		114											
R9 (198-206)	149,5		122	114										
R10 (206-214)	157,5	148	130	122										
R11 (214-222)	165,5	156	138	130	122									
R12 (222-230)	173,5	164		138	130									
R21 (470-478)	421,5	412	394	386	378	360	352	344	336	25,26 328			304	296
R22 (478-486)	429,5	420	402	394	386	368	360	352	344	336	24,25 328		312	304
R23 (486-494)	437,5	428	410	402	394	376	368	360	352	344	25-27 336		320	312
R24 (494-502)	445,5	436	418	410	402	384	376	368	360	352	28,29 344			320
R25 (502-510)	453,5	444	426	418	410	392	384	376	368	360	352	27,28 344		21,22 328
R26 (510-518)	461,5	452	434	426	418	400	392	384	376	368	360	29,30 352		23,24 336
R27 (518-526)	469,5	460	442	434	426	408	400	392	384	376	368	31,32 360		
R28 (526-534)	477,5	468	450	442	434	416	408	400	392	384	376	368	30,31 360	
R29 (534-542)	485,5	476	458	450	442	424	416	408	400	392	384	376	32,33 368	
R30 (542-550)	493,5	484	466	458	450	432	424	416	408	400	392	384	34,35 376	
R31 (550-558)	501,5	492	474	466	458	440	432	424	416	408	400	392	384	33,34 376
R32 (558-566)	509,5	500	482	474	466	448	440	432	424	416	408	400	392	35,36 384
R33 (566-574)	517,5	508	490	482	474	456	448	440	432	424	416	408	400	37,38 392
R34 (574-582)	21 525,5	516	498	490	482	464	456	448	440	432	424	416	408	400
R35 (582-590)	21,22 533,5	524	506	498	490	472	464	456	448	440	432	424	416	408
R36 (590-598)	22,23 541,5	21 532	514	506	498	480	472	464	456	448	440	432	424	416
R37 (598-606)	23,24 549,5	21,22 540	522	514	506	488	480	472	464	456	448	440	432	424
R38 (606-614)	24,25 557,5	22,23 548	530	522	514	496	488	480	472	464	456	448	440	432
R39 (614-622)	25,26 565,5	23,24 556	538	530	522	504	496	488	480	472	464	456	448	440
R40 (622-630)	26,27 573,5	24,25 564	546	538	530	512	504	496	488	480	472	464	456	448
R41 (630-638)	27,28 581,5	25,26 572	21 554	546	538	520	512	504	496	488	480	472	464	456
R42 (638-646)	28,29 589,5	26,27 580	22 562	554	546	528	520	512	504	496	488	480	472	464
R43 (646-654)	29,30 597,5	27,28 588	23 570	21 562	554	536	528	520	512	504	496	488	480	472
R44 (654-662)	30,31 605,5	28,29 596	24 578	22 570	562	544	536	528	520	512	504	496	488	480
R45 (662-670)	31,32 613,5	29,30 604	25 586	23 578	570	552	544	536	528	520	512	504	496	488
R46 (670-678)	32,33 621,5	30,31 612	26 594	24 586	578	560	552	544	536	528	520	512	504	496
R47 (678-686)	33,34 629,5	31,32 620	27 602	25 594	586	568	560	552	544	536	528	520	512	504
R48 (686-694)	34,35 637,5	32,33 628	28 610	26 602	594	576	568	560	552	544	536	528	520	512
R49 (694-702)	35,36 645,5	33,34 636	29 618	27 610	602	584	576	568	560	552	544	536	528	520
R50 (702-710)	36,37 653,5	34,35 644	30 626	28 618	610	592	584	576	568	560	552	544	536	528
R51 (710-718)	37,38 661,5	35,36 652	31 634	29 626	618	600	592	584	576	568	560	552	544	536
R52 (718-726)	38,39 669,5	36,37 660	32 642	30 634	626	608	600	592	584	576	568	560	552	544
R53 (726-734)	39,40 677,5	37,38 668	33 650	31 642	634	616	608	600	592	584	576	568	560	552
R54 (734-742)	40,41 685,5	38,39 676	34 658	32 650	642	624	616	608	600	592	584	576	568	560
R55 (742-750)	41,42 693,5	39,40 684	35 666	33 658	650	632	624	616	608	600	592	584	576	568
R56 (750-758)	42,43 701,5	40,41 692	36 674	34 666	658	640	632	624	616	608	600	592	584	576
R57 (758-766)	43,44 709,5	41,42 700	37 682	35 674	666	648	640	632	624	616	608	600	592	584
R58 (766-774)	44,45 717,5	42,43 708	38 690	36 682	674	656	648	640	632	624	616	608	600	592
R59 (774-782)	45,46 725,5	43,44 716	39 698	37 690	682	664	656	648	640	632	624	616	608	600
R60 (782-790)	46,47 733,5	44,45 724	40 706	38 698	690	672	664	656	648	640	632	624	616	608

Vysvetlivky: Prázdne políčka - zakázané a nepoužiteľné prevody

25,26
328

- čísla kanálov na vstupe meniča, ktoré rušia tento prevod (zrkadlá, produkty s 2 harmonickou a pod.)
- frekvencia oscilátora v MHz

... pokračovanie

Tabuľka prevodov

... pokračovanie

VÝSTUP VSTUP	R7 (182-190)	R8 (190-198)	R9 (198-206)	R10 (206-214)	R11 (214-222)	R12 (222-230)	SR11 (230-238)	SR12 (238-246)	SR13 (246-254)	SR14 (254-262)	SR15 (262-270)	SR16 (270-278)	SR17 (278-286)	SR18 (286-294)
R6 (174-182)														
R7 (182-190)														
R8 (190-198)														
R9 (198-206)														
R10 (206-214)														
R11 (214-222)														
R12 (222-230)														
R21 (470-478)	288	280	272	264	256					216	208	200	192	184
R22 (478-486)	296	288	280	272	264					224	216	208	200	192
R23 (486-494)	304	296	288	280	272	264					224	216	208	200
R24 (494-502)	312	304	296	288	280	272					232	224	216	208
R25 (502-510)	320	312	304	296	288	280	272					232	224	216
R26 (510-518)	328	320	312	304	296	288	280					240	232	224
R27 (518-526)	22,23 336	328	320	312	304	296	288	280					240	232
R28 (526-534)	24,25 344	336	328	320	312	304	296	288					248	240
R29 (534-542)	26,27 352	344	336	328	320	312	304	296	288					248
R30 (542-550)		25,26 352	344	336	328	320	312	304	296					256
R31 (550-558)		27,28 360	352	344	336	328	320	312	304	296				
R32 (558-566)		29,30 368	360	352	344	336	328	320	312	304				
R33 (566-574)			28,29 368	360	352	344	336	328	320	312	304			
R34 (574-582)	36,37 392		30,31 376	368	360	352	344	336	328	320	312			
R35 (582-590)	38,39 400		32,33 384	376	368	360	352	344	336	328	320	312		
R36 (590-598)	40,41 408			31,32 384	376	368	360	352	344	336	328	320		
R37 (598-606)	416	39,40 408		33,34 392	384	376	368	360	352	344	336	328	320	
R38 (606-614)	424	41,42 416		35,36 400	392	384	376	368	360	352	344	336	328	
R39 (614-622)	432	43,44 424			34,35 400	392	384	376	368	360	352	344	336	328
R40 (622-630)	440	432	42,43 424		36,37 408	400	392	384	376	368	360	352	344	336
R41 (630-638)	448	440	44,45 432		38,39 416	408	400	392	384	376	368	360	352	344
R42 (638-646)	456	448	46,47 440			37,38 416	408	400	392	384	376	368	360	352
R43 (646-654)	464	456	448	45,46 440		39,40 424	416	408	400	392	384	376	368	360
R44 (654-662)	472	464	456	47,48 448		41,42 432	424	416	408	400	392	384	376	368
R45 (662-670)	480	472	464	49,50 456			40,41 432	424	416	408	400	392	384	376
R46 (670-678)	488	480	472	464	48,49 456		42,43 440	432	424	416	408	400	392	384
R47 (678-686)	496	488	480	472	50,51 464		44,45 448	440	432	424	416	408	400	392
R48 (686-694)	504	496	488	480	52,53 472			43,44 448	440	432	424	416	408	400
R49 (694-702)	512	504	496	488	480	51,52 472		45,46 456	448	440	432	424	416	408
R50 (702-710)	520	512	504	496	488	53,54 480		47,48 464	456	448	440	432	424	416
R51 (710-718)	528	520	512	504	496	55,56 488			46,47 464	456	448	440	432	424
R52 (718-726)	536	528	520	512	504	496	54,55 488		48,49 472	464	456	448	440	432
R53 (726-734)	544	536	528	520	512	504	56,57 496		50,51 480	472	464	456	448	440
R54 (734-742)	552	544	536	528	520	512	58,59 504			49,50 480	472	464	456	448
R55 (742-750)	560	552	544	536	528	520	512	57,58 504		51,52 488	480	472	464	456
R56 (750-758)	568	560	552	544	536	528	520	59,60 512		53,54 496	488	480	472	464
R57 (758-766)	576	568	560	552	544	536	528	520			52,53 496	488	480	472
R58 (766-774)	584	576	568	560	552	544	536	528	60 520		54,55 504	496	488	480
R59 (774-782)	592	584	576	568	560	552	544	536	528		56,57 512	504	496	488
R60 (782-790)	600	592	584	576	568	560	552	544	536			55,56 512	504	496

Vysvetlivky: Prázdné políčka - zakázané a nepoužiteľné prevody
 - čísla kanálov na vstupe meniča, ktoré rušia tento prevod (zrkadlá, produkty s 2 harmonickou a pod.)
 25,26 - frekvencia oscilátora v MHz
 328